


acurus
ACD11
compact disc player

owner's
information

Congratulations on your purchase of the ACD11 Compact Disc Player. Please take the time to read this brief owner's manual. Upon its completion, you will understand the set-up and operation of your new Compact Disc Player.

Your ACD11 is a performance Compact Disc Player that can also function as a high quality transport. Regardless of which application you choose the Front Panel Controls and Remote Control Operation sections will apply.

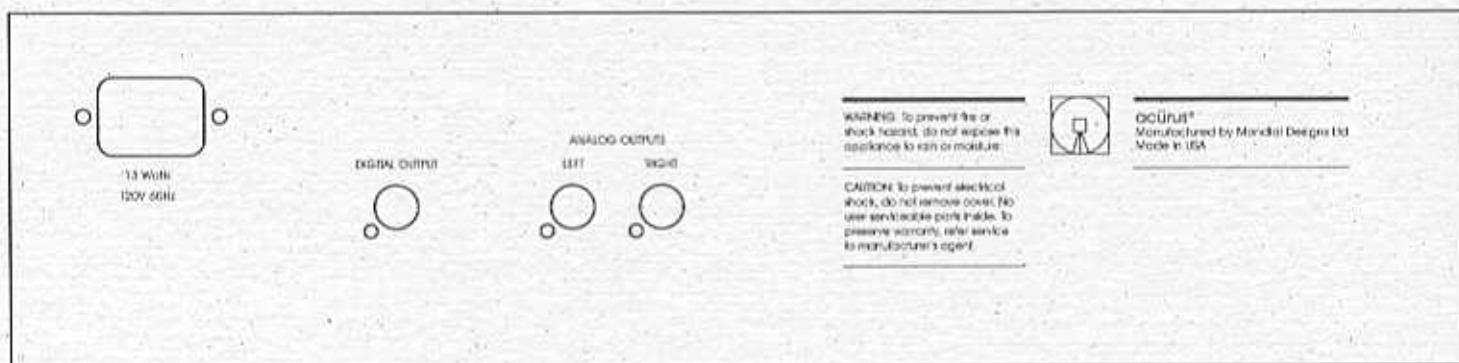


REAR PANEL CONNECTIONS

ANALOG OUTPUTS—Connect the left and right analog outputs on the back of your ACD11 to the CD Player or Aux input of your preamp or receiver.

DIGITAL OUTPUT—If you are using your ACD11 in conjunction with an outboard D/A converter connect this digital output to a coaxial digital input on your D/A converter.

AC INPUT—Plug the female end of the provided AC line cord to the 3-pronged IEC socket on the rear of your ACD11.

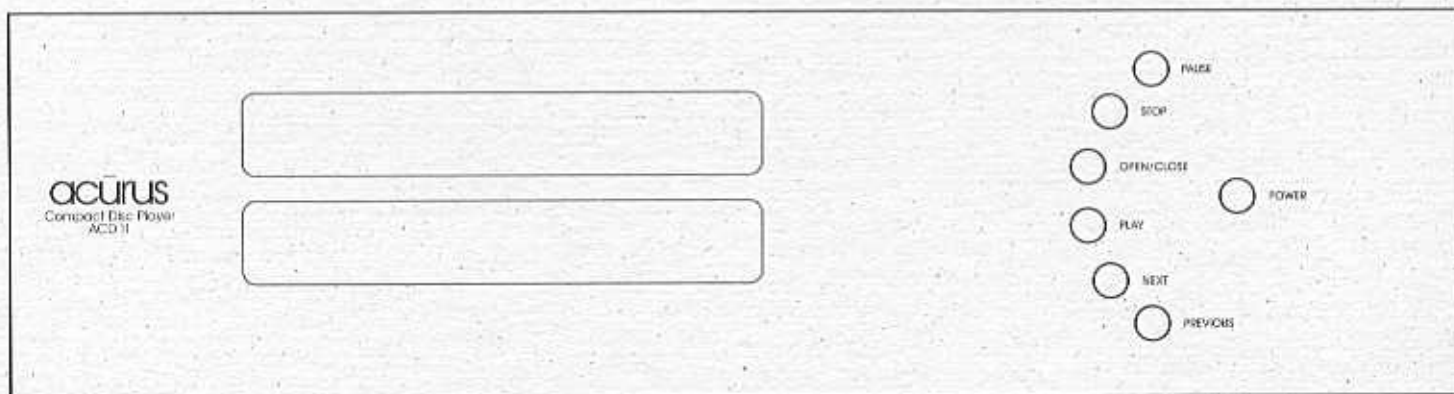

FRONT PANEL CONTROLS

POWER—This button turns the power on and off. Your ACD11 will achieve operational stability a few seconds after turn on. Until then the output will be muted.

PAUSE—Pressing this button will stop the recording at a particular point. To resume playing at the same spot, press play.

STOP—This button stops the disc from spinning and should always be used prior to removing the disc from the drawer. If any tracks were programmed into your ACD11, the stop button will clear this sequence.

OPEN/CLOSE—Pressing this button will open and close the disc drawer to allow the insertion or removal of a disc.

PLAY—Press this button to start playing a disc from the beginning of track one or to resume play from the Pause mode.

NEXT—Each time this button is tapped, the disc will advance to the beginning of the next track.

PREVIOUS—Each time this button is tapped the disc will advance to the beginning of the previous track. The next and previous buttons will function when your ACD11 is in the Play, Stop or Pause modes.

REMOTE CONTROL

POWER—This button turns the power on and off. Your ACD11 will achieve operational stability a few seconds after turn on. Until then the output will be muted.

STOP—This button stops the disc from spinning and should always be used prior to removing the disc from the drawer. If any tracks were programmed into your ACD11, the stop button will clear this sequence.

PLAY—Press this button to start playing a disc from the beginning of track one or to resume play from the Pause mode.

OPEN—Pressing this button will open and close the disc drawer to allow the insertion or removal of a disc.

PROGRAM/RECALL—This button has several functions, as explained below:

Direct Track Programming—The playing sequence of up to twenty tracks can be determined as follows: press stop, then press program/recall, then press the direct to track numbers in the sequence you wish the track to play. The selected tracks will appear on the display. Press play to hear the tracks in the sequence chosen.

Next/Previous Track Programming—The playing sequence of up to twenty tracks can be determined as follows: press stop, then press program/recall, then press the next or previous track button to reach the first track you wish to program, then press program/recall. This procedure may be repeated up to twenty times to determine playing sequence. The selected tracks will appear on the display. Press play to hear the tracks in the sequence chosen.

After programming the sequence of track play, you may pause, repeat or scan your selections. To display your chosen selections, press program/recall while in either play or pause mode. They will be scanned in the order entered. To clear the memory of selected tracks, press stop.

PAUSE—Pressing this button will stop the playback at a particular point. To resume playing at the same spot, press play.

LIGHT—This button turns the display light on and off, while all other functions continue to operate.

RANDOM—This button allows the tracks to be played in a random rather than sequential order. The random order of play changes each time this button is activated.

DIRECT TO TRACK 1-12—These buttons allow you to directly go to any track on the disc by pressing the desired track number.

10+—This button allows you to directly go to any track beyond track ten by pressing it and the additional number that adds to the track you wish to access. Example: 10+ and 4 will directly play track 14.


REPEAT—This button allows for continuous replay of the loaded disc. The repeat button functions in either play, random program or scan modes.

SCAN—This button will cause the ACD 11 to scan the first fifteen seconds of each track in sequential order. The scan button functions in either play or stop mode.

TIME—This button changes the way time is presented on the display. Normally, the time displayed is the amount of time that particular track has been playing. Press the time button once and the time displayed is the amount of playing time remaining on that track. Press the time button again, and the time displayed is the amount of playing time remaining for the entire disc. Press the time button again, and the normal time display is resumed.

SEARCH FORWARD—This button allows you to forward scan the disc at double speed, while listening at a muted output level.

SEARCH REVERSE—This button allows you to reverse scan the disc at double speed, while listening at a muted output level. The forward and reverse buttons function in either play or pause modes. If a search button is pressed and held, the scan speed is lowered for a few seconds.

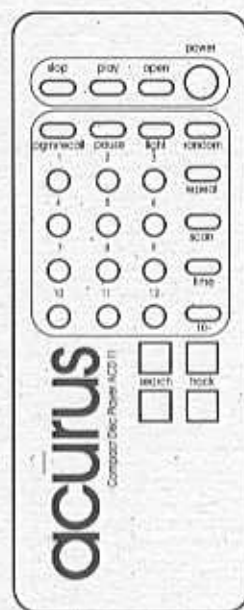

SPECIFICATIONS

Frequency Response*
5Hz-20kHz/ -0.3 dB

THD
.005%

Dynamic Range
92 dB

S/N Ratio
>90 dB

Channel Separation
88 dB

Output Voltage
2.0 V

Sampling Frequency
44.1 kHz

Oversampling Rate
32X

Resolution
16 Bit

Dimensions
17"W x 5"H x 11"D

Weight:
20 Lbs.

For any additional information on your Acurus ACD11 Compact Disc Player, please call Mondial Designs Ltd, at 914-693-8008. Acurus Audio is manufactured by Mondial Designs Ltd.

CAUTION: To prevent electric shock, do not remove cover, no user-serviceable parts inside. Refer servicing to qualified personnel.

WARNING: To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

MONDIAL DESIGNS LIMITED

20 Livingstone Avenue, Dobbs Ferry, NY 10522 • (914) 693-8008 • Fax (914) 693-7199