

Introduction

Naim Audio products are always conceived with performance as the top priority and careful installation will help ensure that their full potential is achieved. This manual begins with statutory safety warnings and general installation tips for all Naim Audio products. Product specific information begins in Section 6.

1 Equipment Installation

Normally your Naim equipment will have been installed by the dealer who sold it to you even if you live outside their immediate vicinity. Your dealer is responsible for making sure that the system sounds exactly as it should and information given here is not intended to reduce this responsibility in any way.

2 Cables and Connections

Please do not modify the standard interconnect cables supplied with your Naim equipment. This is important for safety as well as performance. One end of each cable is marked with a band to establish its correct orientation. The band always marks the end that connects to the signal source.

Loudspeaker leads are also very important. Naim loudspeaker cable is correct for your system and your dealer will make up leads to suit your equipment installation. The leads should each be at least 3.5 metres long and of equal length. The recommended maximum is 20 metres. Loudspeaker leads are, like interconnect leads, directional, and should be connected so that the printed arrow points towards the speakers. Using alternative loudspeaker cable will degrade performance, and may even damage your amplifier. An exception to these loudspeaker cable constraints is the NAP 6-50 multi-room power amplifier. The NAP 6-50 is designed to be tolerant of both a wide variety of cable types, and cable runs well in excess of 20m. The loudspeaker connectors supplied with all Naim amplifiers and loudspeakers have been specifically designed to make a robust mechanical connection. It is essential that these are used in order to comply with current European safety regulations.

All the plugs and sockets supplied with your Naim equipment have been chosen because they make the best possible connection for their purpose. A poor contact will degrade the signal substantially and plugs and sockets should look clean and free from corrosion. The easiest way to clean them is to switch off the equipment, pull the plugs out of their sockets, and push them back in again. Special contact cleaners and contact enhancers should not be used as they tend to deposit a film which is very difficult to remove and may degrade the sound.

CONTENTS

Page	Section
1	1 Equipment Installation
1	2 Cables and connections
1	3 Getting Started
	3.1 switching on and off
	3.2 running in
2	3.3 mains supply
	3.4 siting the equipment
	3.5 if you have a problem
2	4 Warnings
3	5 Connection
	5.1 mains lead
	5.2 non-rewireable mains plugs
	5.3 fuse carrier
	5.4 plug fuses
4	Supercap rear panel
	Hi-cap rear panel
	Flatcap 2 rear panel
	NAPSC rear panel
5	NAC 252 connection to Supercap and Hi-cap
6	NAC 282 connection to Supercap
7	NAC 282 connection to NAPSC, Hi-cap and Flatcap 2
8	NAC 202 connection to Hi-cap and NAPSC
	NAC 112 connection to Flatcap 2
9	Specifications
	Standards Declaration

3 Getting Started

3.1 switching on and off

Source components and power supplies for cd players, tuners, preamplifiers and crossovers should be switched on before switching on the power amplifier(s). Always switch the amplifier(s) off and wait about a minute for the power supply capacitors to discharge before connecting or disconnecting any leads. Always use the power switch on the product rather than a mains outlet switch.

3.2 running in

Your Naim equipment will take a considerable time to run in before it performs at its best. The duration varies, but under some conditions you will find that the sound continues to improve for as much as five weeks. Better and more consistent performance will be achieved if the system is left switched on for long periods. It is worth remembering however that all electronic equipment can be damaged by lightning. Please read the warnings section.

Introduction

3.3 mains supply

Where fused plugs are used 13 amp fuses should be fitted. Fuses of a lower rating will fail after a period of use.

A hi-fi system usually shares a mains circuit with other household equipment some of which can cause distortion of the mains waveform. In some Naim equipment such distortion can lead to a mechanical hum from the transformers. The hum is not transmitted through the speakers and has no effect on the performance of the system but is purely local to the transformer itself. A separate fused mains circuit (like that reserved for electric cookers) may reduce transformer hum. Such a circuit (ideally with a 30 or 45 Amp rating) will also have a lower impedance, supply cleaner power, and consequently improve system performance.

Do not wire voltage dependent resistors or noise suppressors into mains plugs. They degrade the mains supply and the sound.

3.4 siting the equipment

Power supplies and amplifiers should be located a reasonable distance away from other equipment. This separation will stop transformer radiation causing hum audible from the loudspeakers. The maximum separation distance for connected equipment is that allowed by the standard interconnect lead.

Some Naim equipment is extremely heavy. Ensure that your equipment rack or table can easily support the weight and is stable.

3.5 if you have a problem

Legal consumer protection varies from country to country. In most territories a dealer must be prepared to take back any Naim equipment he has sold you if he cannot make it work to your satisfaction in your own home. A problem may be due to a fault in any part of the system or its installation so it is essential to make full use of your local dealer's diagnostic skills on site. Please contact your local distributor, or Naim at the address in the back of this manual, if any difficulties cannot be resolved. Some Naim equipment is made in special versions for different territories and this makes it impracticable to arrange international guarantees. Please establish the guarantee arrangements with your own dealer at the time of sale. We are always available to offer help and advice.

It is essential that repairs and updates are only carried out by an authorised Naim dealer, or at the factory by Naim itself. Many components are made, tested or matched specially for Naim and appropriate replacements are often unobtainable from non-specialist sources.

4 Warnings

Naim equipment is designed to offer the finest sound quality that can be achieved avoiding compromise wherever possible. This can lead to circumstances that may be unfamiliar. The material that follows contains advice specifically related to Naim equipment as well as more general warnings about the use of domestic audio products. Please read it carefully.

The transformers in Naim power amplifiers and power supplies may sometimes make a mechanical noise caused by distortion of the mains waveform. Naim transformers are large in size and have heavy gauge secondary windings making them relatively sensitive to such distortion. A separate mains circuit for your hi-fi system may reduce the effect while also giving an overall improvement in sound quality. It may be necessary however to take account of mechanical transformer noise when siting your equipment.

IMPORTANT

In order to comply with current European safety regulations it is essential that the Naim loudspeaker connectors supplied with amplifiers and loudspeakers are used.

Do not under any circumstances allow anyone to modify your Naim equipment without first checking with the factory, your dealer, or your distributor. Unauthorised modifications will invalidate your guarantee.

For your own safety do not under any circumstances open Naim equipment without first disconnecting the mains.

The following label is attached to all mains powered equipment:



Introduction

In some circumstances, depending on where you live and the earthing arrangements in your home, you may experience radio frequency interference. Controls on broadcasting in some territories allow very high levels of radio frequency radiation and both the choice and exact siting of equipment may be critical. If there is a known problem in your locality it is advisable to arrange for a home demonstration before purchase to find out if Naim equipment is likely to be affected. Susceptibility to radio frequency interference is related to the wide internal bandwidth necessary for high sound quality. Systems incorporating moving coil phono preamplifiers and active crossovers are more likely to suffer. A radio frequency filter kit is available for some Naim equipment but sound quality will be progressively compromised as more elements of the kit are fitted. In situations of extreme radio interference Naim equipment may be unsuitable.

Your Naim hi-fi system can be damaged by lightning. Power amplifiers are particularly at risk and should be turned off when there is risk of lightning strike. For complete protection all mains plugs and any aerial cables should be disconnected when not in use.

Equipment must not be exposed to dripping or splashing and no objects filled with liquid, such as vases, should be placed on the equipment.

Use of non-standard speaker cables or interconnects may invalidate your guarantee.

5 Connection

5.1 mains lead

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

The wire which is coloured GREEN-AND-YELLOW must be connected to the terminal in the plug which is marked by the letter E or by the safety earth symbol or coloured green or green-and-yellow.

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter N or coloured black.

The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter L or coloured red.

5.2 non-rewireable mains plugs

If a non-rewireable plug is cut from a mains lead (for whatever purpose) the plug **MUST** be disposed of in a way to render it totally useless. Considerable shock hazard exists if the cut-off plug is inserted into a mains outlet.

5.3 fuse carrier

Should the plug fuse carrier be damaged or lost, the correct replacement must be obtained from your dealer, or from Naim Audio direct. Do not use the plug until the fuse carrier is replaced.

5.4 plug fuses

Replace only with ASTA or BS 1362 approved fuses.

NOTE

This equipment has been tested and found to comply with the relevant EMC and Safety Standards, and, where applicable, also complies with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
 
 
 
 
- **Reorient or relocate the receiving antenna.**
- **Increase the separation between the equipment and the receiver.**
- **Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- **Consult your Naim dealer or an experienced radio/TV technician for help.**

Power Supply Rear Panels






mains input

Supercap

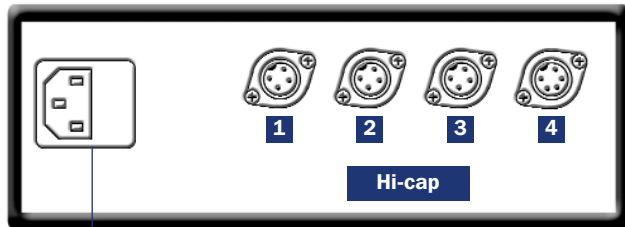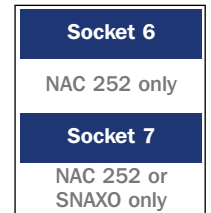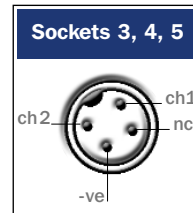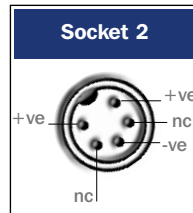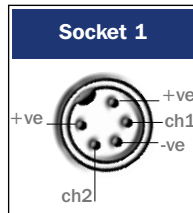

mains input

  
 
Hi-cap

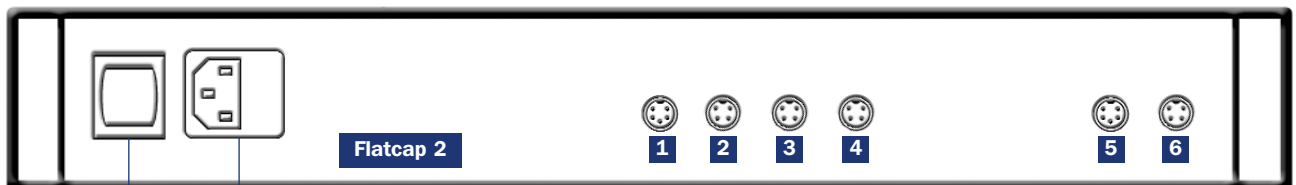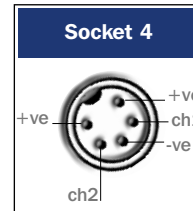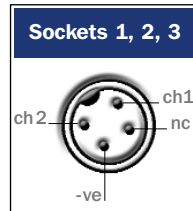

power


mains input

  Flatcap 2

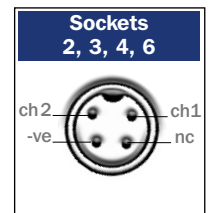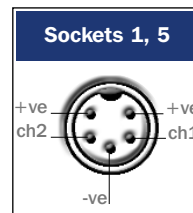

Note

 The Flatcap 2 features various technologies to reduce microphonic effects, in particular a compliant mounting for the main circuit boards and the DIN sockets on the rear. Some movement of the board and sockets when connecting/disconnecting is normal.

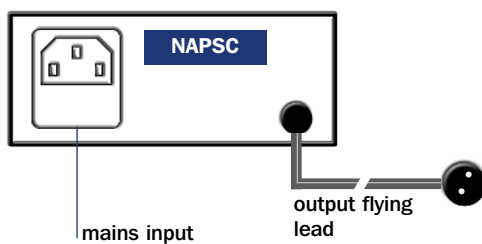


NAC 252 connection to Supercap



Note

 For best performance the **Burdy** and **5 pin DIN** cables should be run as close together as possible.

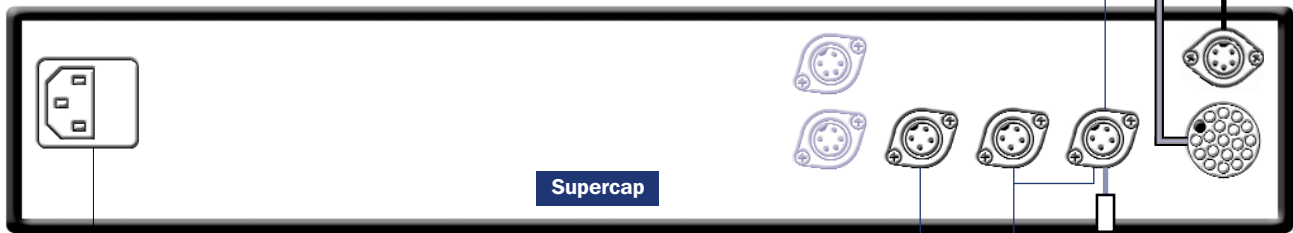

mains input

additional signal output

to mono or dual mono power amplifiers

to stereo power amplifiers or to IX05 using internal power supply

 


mains input

to SNAXO or IX05


Note

Extra Supercap, Hi-cap or Flatcap 2 for SNAXO or IX05.
Supercap - socket 5, Hi-cap - socket 3, Flatcap 2 - socket 2.

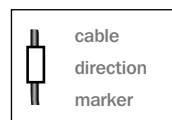




Interconnect Cables	
4 to 4 pin DIN	
240° 5 to 5 pin DIN	
Burdy	

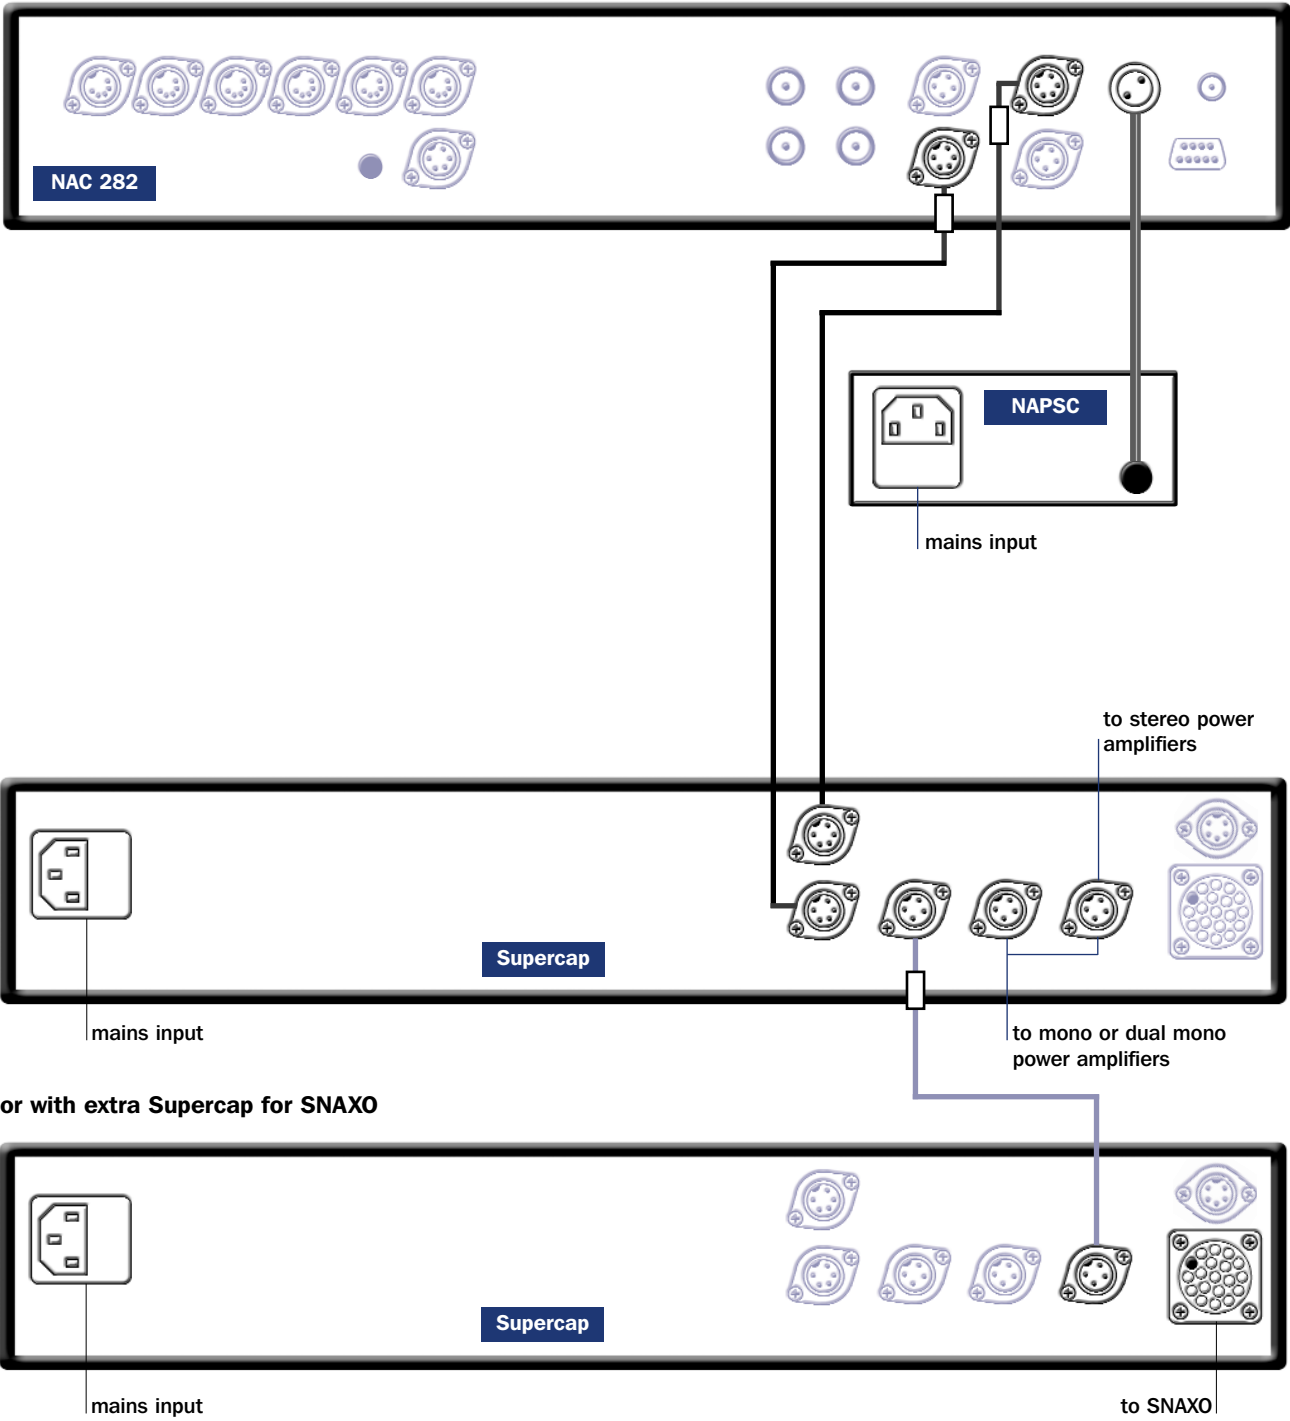 
NAC 282 connection to Supercap




or with extra Supercap for SNAXO

	cable direction marker
Interconnect Cables	
	4 to 4 pin DIN 
	240° 5 to 5 pin DIN 

 
NAC 282 connection to Hi-cap and NAPSC

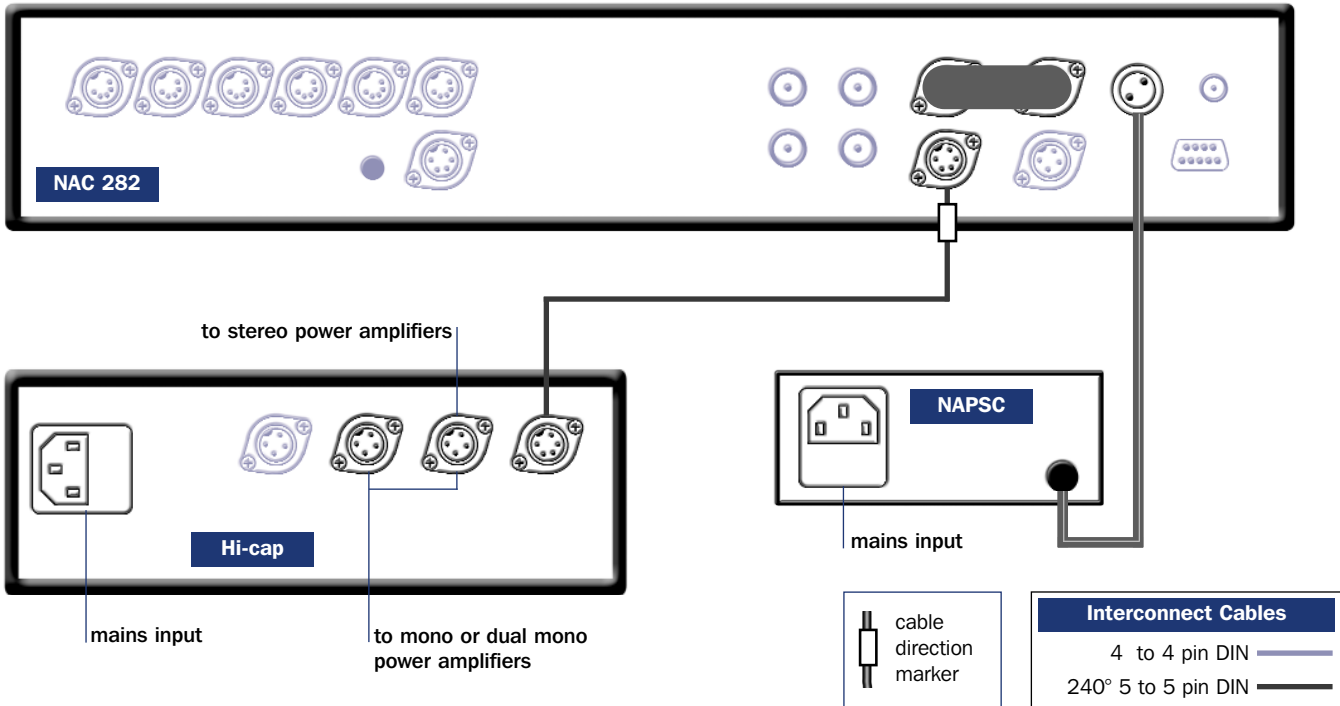

 
Or NAC 282 connection to two Hi-caps (or Flatcap 2s)

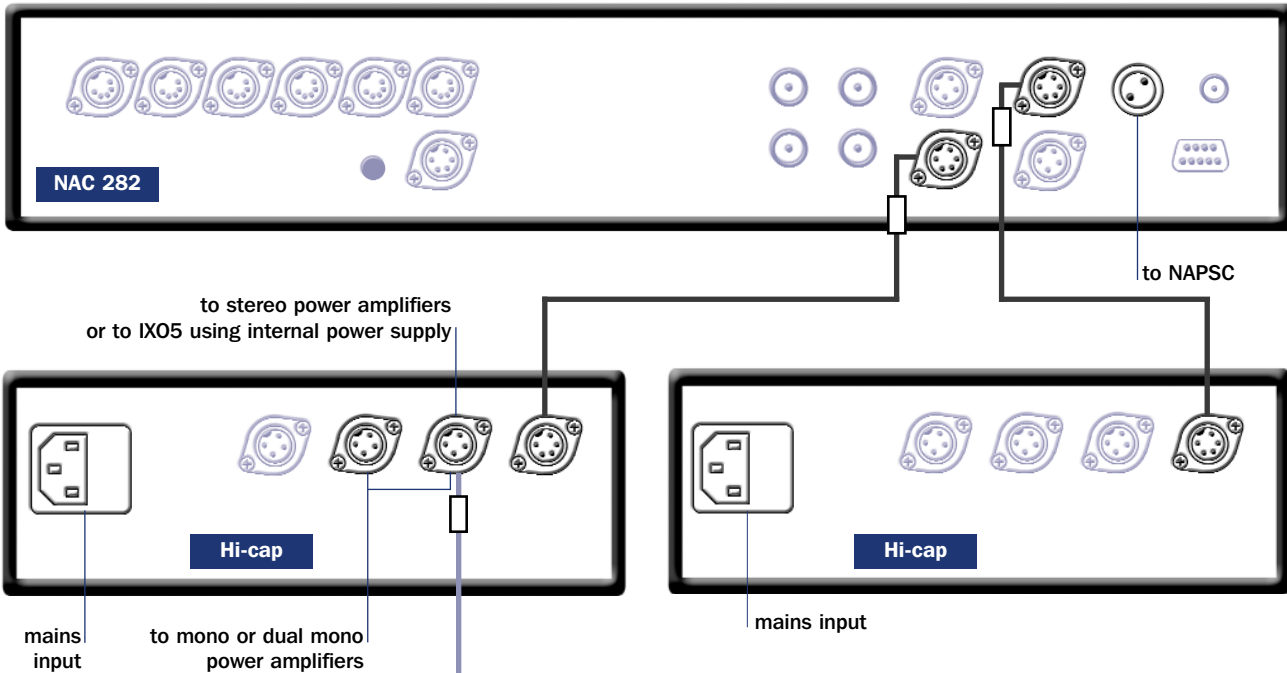

 
or with extra Flatcap 2 or Hi-cap for SNAXO or IX05

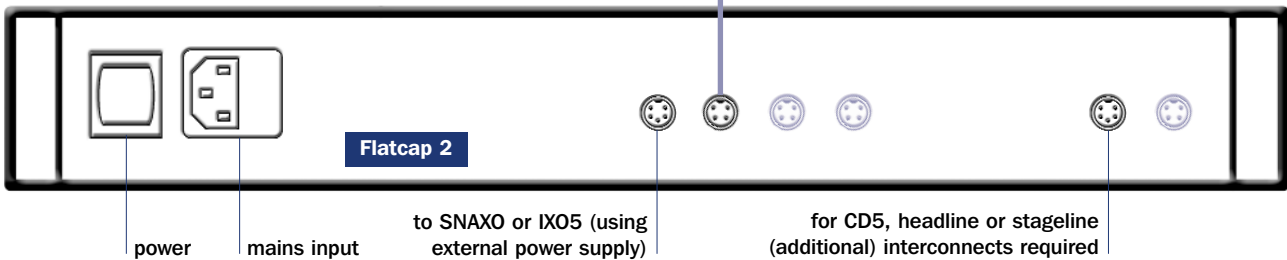

NAC 202 connection to Hi-cap and NAPSC

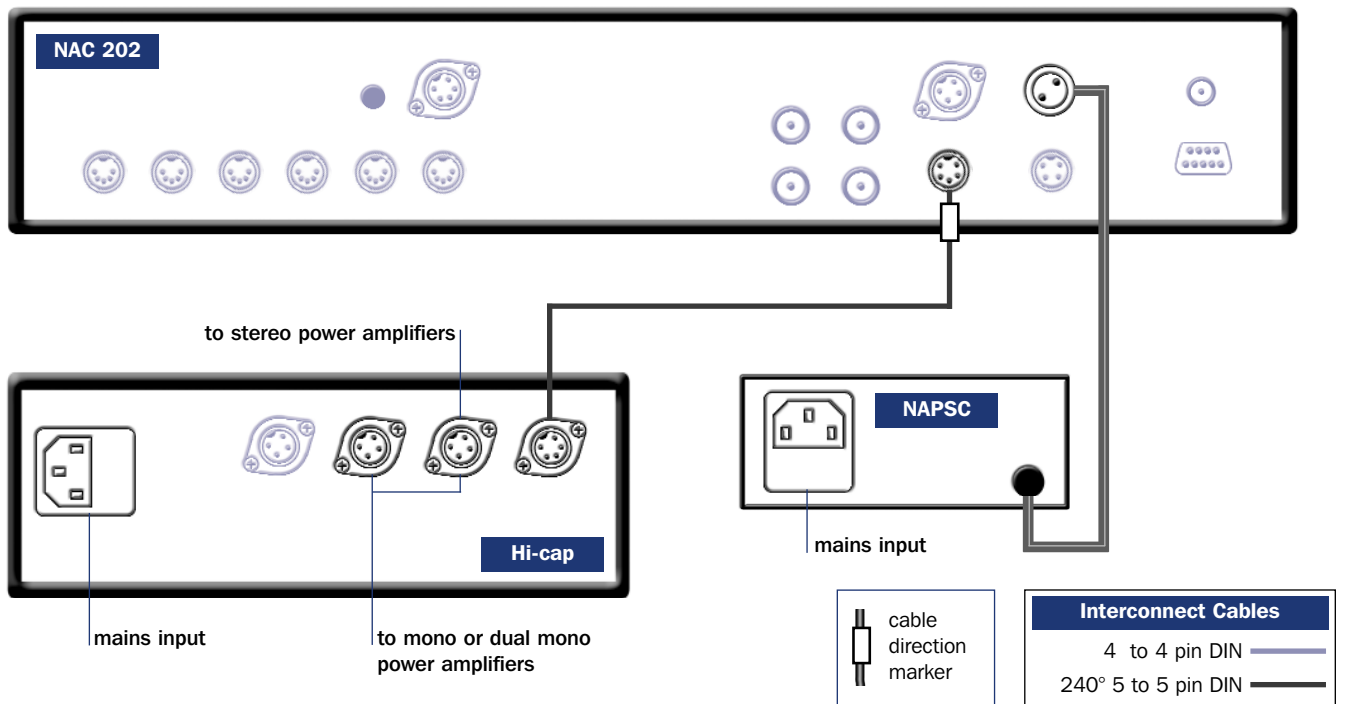 

NAC 112 connected to Flatcap 2

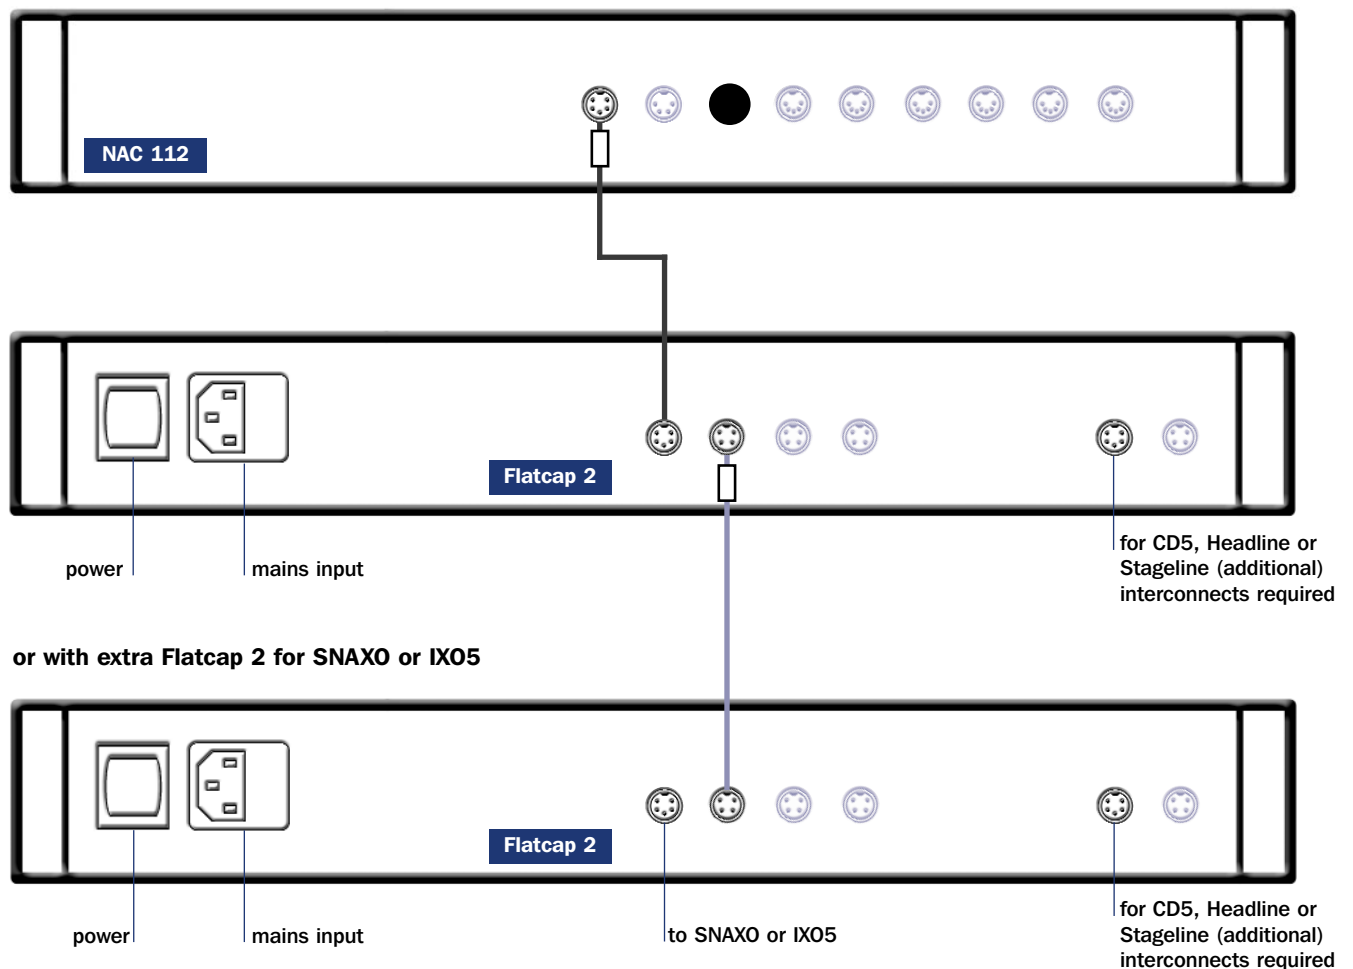 

Specifications

Supercap, Hi-cap, Flatcap 2, NAPSC

DC Outputs

Supercap	13 x 24V, 2 x 12V
Hi-cap	2 x 24V
Flatcap 2	2 x 24V, 2 x 22V
NAPSC	1 x 18.5V

Mains Supply 100V, 115V, 230V 50 or 60Hz

Case Size (H x W x D)

Supercap	87 x 432 x 314mm
Hi-cap	87 x 207 x 314mm
Flatcap 2	70 x 432 x 301mm
NAPSC	57 x 121 x 187mm

Declaration of conformity to appropriate standards

Manufacturer

Naim Audio Limited, Southampton Road, Salisbury, England, SP1 2LN

Products

Supercap, Hi-cap, Flatcap 2, NAPSC

Safety

HD 195-S6
EN 60 065

EMC

Emissions Tested to:	EN 55013 - Sound and television broadcast receivers and associated equipment
Immunity Tested to:	EN55020 - Electromagnetic immunity of broadcast receivers and associated equipment
In accordance with:	CISPR 16-1 - Radio disturbance and immunity measuring apparatus
	CISPR 16-2 Methods of measurement of disturbances and immunity
	IEC 801-2 8KV (air gap) 4KV (contact) (performance criterion B)
	IEC 801-3 3V/m 20dB (performance criterion A)
	IEC 801-4 1KV (AC lines) 0.5KV (signal lines) (performance criterion B)

